



Precision Points


Masonry 03

040523

09.08.2026

Flashing Exposed Edge

Most membrane flashing is designed to be installed between ½" to 1" from the front face of the masonry – review Mfr instructions:

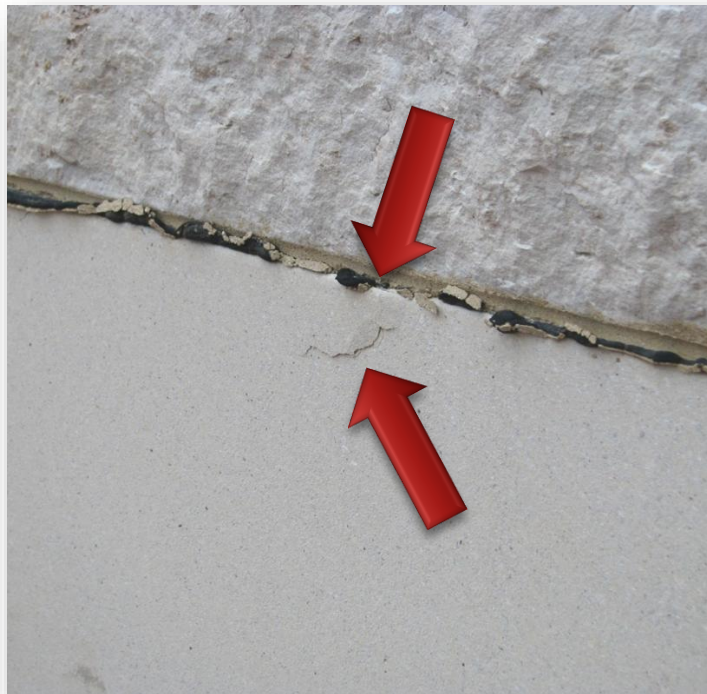

The membrane needs to be protected from UV, sun, and heat. The membrane will flow to the front face and potentially damage the masonry & mortar...and be unsightly.