


It's easy to forget the air barrier transition into a scupper with the roofing membrane if the drawings are not clear or provide detailing.

When a scupper is to be installed...

Provide a transition membrane and make sure that all materials are compatible in the direction of the installation.

*(I recommend installing the transition membrane (light blue) first, with the roofing and air barrier installed over the compatible transition membrane to ensure the best installation and easiest material compatibility).*

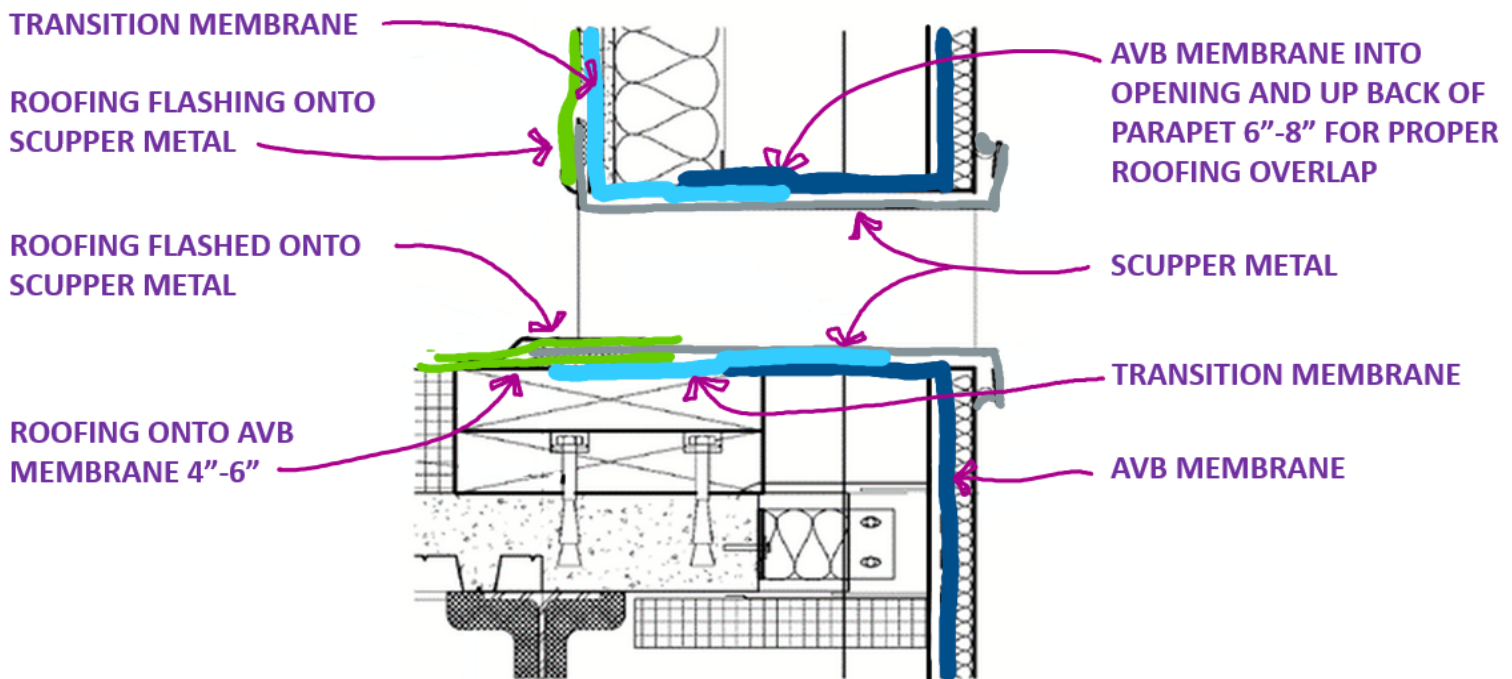

*Sample drawing with proper air barrier transition to the roofing*

