

6/8/21

Precision Points

AVB 13

072700

04.06.2026

AVB Dating


Communication between the General Contractor, Air Barrier Contractor, and Veneer Contractor is key to any relationship.



Make sure that AVB is properly cured prior to the installation of the masonry flashing.



Verify how many days/hours are required from the AVB manufacturer (Typically 48-72 hours)

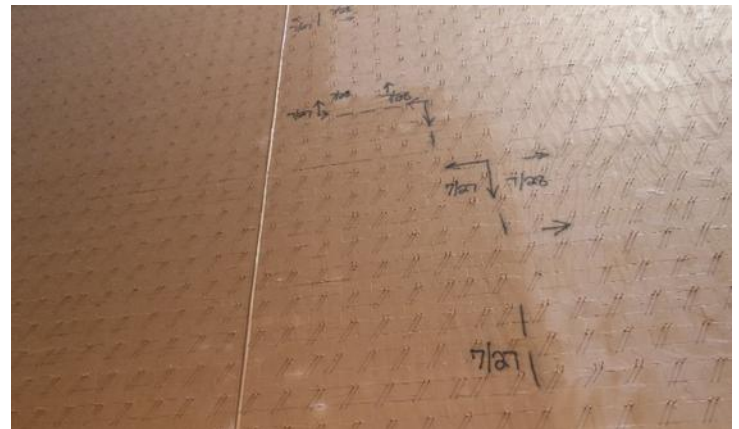

Underlying materials must be given proper time to cure or dry before being covered – otherwise, solvents might get trapped under the flashing

Ask the question and discuss the timing required with the team.

Dating the material with a compatible paint is a good way to communicate the date installed so that the next trade will ask the question or be reminded about the discussion held at the pre-installation meeting, to wait the required amount of time needed...and prevent unnecessary failure.